



Touch Adapter Voice update guide

1. Please download update manager software and update plug-in on a PC / notebook with Bluetooth® function
2. Install and start update manager software afterwards
3. Switch on mounted Touch Adapter and make sure that your notebook / PC is in signal range to the Touch Adapter
4. Activate Bluetooth®-Interface on PC
5. Please continue activating the software-update in Touch Adapter menu with following steps:
More -> settings -> device -> system -> Software-Update
6. Please search for available Bluetooth®-devices via notebook / PC -> Touch Adapter will be displayed when in range
7. Please select Touch Adapter and confirm pairing with PIN-code "0000",
NOTE: If you recently changed your PIN-code, please use your individual code.
9. Select Bluetooth®-Menu of PC: type of connection "serial COM port connection"
10. Note shown COM-port connection as previously mentioned, for you will need it later on
11. Activate connection by right click symbol Touch Adapter of Bluetooth®-Manager
12. Switch over to update manager afterwards
13. Press „Browse“ button and install current software version (ZIP-packed data)
14. Follow the instructions of update manager and confirm steps with "Next"
NOTE: now the port mentioned in step 10 has to be confirmed
15. After successful transfer all data will be unpacked and initialised automatically on Touch Adapter
16. Do not remove the monitor until confirmation of successful completion of software update appears on the display

Notes: If you have a PC and the distance between PC and vehicle with installed Touch Adapter exceeds 10 meters, problems may occur with the completion of the Bluetooth® connection. If you use a notebook for the update please charge up its battery beforehand.